



File Name: canon bjc-55 manual.pdf

Size: 4260 KB

Type: PDF, ePub, eBook

Category: Book

Uploaded: 8 May 2019, 15:41 PM

Rating: 4.6/5 from 763 votes.

Status: AVAILABLE

Last checked: 7 Minutes ago!

In order to read or download canon bjc-55 manual ebook, you need to create a FREE account.

[**Download Now!**](#)

eBook includes PDF, ePub and Kindle version

[❑ Register a free 1 month Trial Account.](#)

[❑ Download as many books as you like \(Personal use\)](#)

[❑ Cancel the membership at any time if not satisfied.](#)

[❑ Join Over 80000 Happy Readers](#)

Book Descriptions:

We have made it easy for you to find a PDF Ebooks without any digging. And by having access to our ebooks online or by storing it on your computer, you have convenient answers with canon bjc-55 manual . To get started finding canon bjc-55 manual , you are right to find our website which has a comprehensive collection of manuals listed.

Our library is the biggest of these that have literally hundreds of thousands of different products represented.



Book Descriptions:

canon bjc-55 manual

If such changes or modifications should be made, you could be required to stop operation of the equipment. Canon U.S.A. Inc. One Canon Plaza, Lake Success, NY 11042, U.S.A. Tel No. 516 3285600. Their standards and logos are uniform among participating nations. Conventions This manual employs the following conventions to alert you to information that will help you use the printer safely and efficiently. For details, refer to Getting Started. Reference Guide Online manual which explains how to use the printer. You can view the Reference Guide on the screen of your computer. To avoid causing a fire or dangerous electrical shock, never store volatile substances like alcohol, thinner, etc. To avoid a fire or serious electrical shock, never use alcohol, benzene, thinner, or any other type of volatile liquid cleaner to clean the printer. Using any other battery could cause the printer to overheat and cause smoke. If more than one USB printer is connected to your computer, you should use a USB hub. If you are using Windows 98, each printer connected to the hub must be installed one by one. Compact portable design The printer's extremely compact design and light weight allow it to fit easily into a briefcase. Despite its small size the printer has full colour printing capability on plain paper and a variety of other media. Whenever you need any of these replaceable items, contact a local Canon Authorised Dealer or your Canon marketing representative. Bubble Jet Paper LC301 Specially designed for Canon Colour Bubble Jet printers, this paper produces sharp and vivid colour output with a more natural appearance. High Gloss Film is fully compatible with your Canon colour inks. Use this film for trade show displays or other special presentations. You can gain sharper and more vivid colour output with High Gloss Film than with Coated Paper or Glossy Paper. Color Image Scanner Cartridge IS12 Turns your printer into a colour scanner. <http://www.perfekt-dom.pl/designhome/admin/userfiles/cub-cadet-rzt-50-kw-manual.xml>

- **canon bjc-55 manual, canon bjc-55 bubble jet printer manual, canon bjc-55 manual, canon bjc-85 manual.**

It offers guidelines on finding a suitable location for the printer, explains how to unpack the printer, and gives an overview of the printer's components. When the AC adapter is connected, the printer is powered from the AC adapter. Place the printer on a flat clean surface with enough space to support printed sheets as they are ejected. USB interface connector Provides connection point for connection of a USB interface cable from the computer. Install only a Canon LiIon Battery LB50 battery pack. You must install the battery pack and leave it installed in the printer, even if you intend to use the printer only with the AC adapter. Push in on the right side of the battery pack to lock it in place. With Windows 98 and Windows 2000, you can use the USB interface Prepare a Color BJ Cartridge BC11e connection. If the power lock switch is in the left position, slide it to the right. When the power lock switch is in the left position, it locks the power switch off so it cannot be switched on accidentally during transportation. This section explains the printer drivers. Using infrared data transmission Follow this procedure to set up the printer for data transfer via the IrDA interface. The printer IrDA interface is on the left side of the printer. Each BJ Cartridge contains removable ink cartridges and a print head unit which releases the ink. To ensure the best performance with the BJC55 Series, use only Canon Color BJ Cartridge BC11e, Canon BJ Cartridge BC12e Photo or Canon Black BJ Cartridge BC10. Canon cannot guarantee your print quality if you use any other type of BJ Cartridge. When you switch the printer on, the printer beeps three times and the cartridge holder moves to the centre if a BJ Cartridge is not installed. CARTRIDGE After the BJ Cartridge is installed, the printer requires at least two seconds to detect the presence of the BJ Cartridge then the cartridge holder will move to the home

position. http://artoren.ru/files/e_flite_blade_cx3_manual.xml

To get the best performance from your printer, use the media most appropriate for the task and make sure that you follow these instructions to load it correctly. This printer meets the standards for using recycled paper. The BJC55 Series produces excellent printouts on recycled paper. Chapter 3 Printing. The Canon BJC55 Series is capable of printing not only on plain paper, but also on envelopes, transparencies, and other media. Please use the following guidelines when selecting a print media for your documents. If the battery pack is not installed, you may experience problems feeding paper or other media into the front feed slot. Print Side Purpose Either side General purpose printing. After the sheet is inserted again correctly, the printer will reverse feed it slightly and the buzzer will not beep. Check the printer POWER lamp and make sure that it is on. If the printer is off, press the POWER button to switch it on. Press the CARTRIDGE button. The cartridge holder moves to the centre and the POWER lamp flashes. The white and Grey tabs are used for replacing the ink cartridge. Align the marks on the BJ Cartridge with the marks on the container and insert the BJ Cartridge into the container. Screw the lid onto the storage container until it stops then continue twisting the lid until the mark on the lid is aligned with the mark on the body of the storage container. Protective cap To avoid staining your clothing or articles in your work area, do not drop or shake the BJ Cartridge. The ink in the BJ Cartridge can stain fabric permanently. Wait about three seconds and press the CARTRIDGE button once. After the BJ Cartridge is installed, the printer requires at least two seconds to detect the presence of the BJ Cartridge. The cartridge holder moves to the home position, and the printer automatically executes print head cleaning. Press and hold down the POWER button. Wait for the number of beeps required for the test print you want then release the POWER button.

Press the POWER button to switch the printer off. Press and hold down the POWER button and count the number of beeps. Status Information Sample Nozzle Check Pattern Prints a hatch pattern so you can check the performance of the print head. If the print heads become clogged, the lines will appear broken or not complete. Install and use only a Canon Lilon Battery LB50 in this printer. You must install the battery pack and leave it installed in the printer even if you intend to use the printer only with the AC adapter. If the optional Auto sheet feeder is installed on the printer, remove If the front cover is closed, open it. Push the battery pack release to the right spring slightly out of the printer Remove the battery pack from the printer. Align the mark on the printer with the mark on the battery pack and insert the left end of the battery pack into the printer at a slight angle. Press the CARTRIDGE button on the printer. Follow the procedures described in the Windows Printer Driver Guide or the Macintosh Printer Driver Guide. The lowink warning will be reset automatically by pressing the CARTRIDGE button at the last step of the replacement procedure. If spilled, the ink is difficult to clean. Chapter 5 Daily Operation and Printer Maintenance. Black BJ Cartridge BC10 Chapter 5 Daily Operation and Printer Maintenance Ink Cartridge BCI11 Black When the black ink runs out, replace this ink cartridge. The frequency of changing the ink cartridges will vary according to how the printer is used. If you frequently print images of heavy density, you will need to change the ink cartridges more often. This is for BJ Cartridge replacement. Be sure to leave the green print head unit in the printer. Chapter 5 Daily Operation and Printer Maintenance Press this grey hook to remove the black ink cartridge. Chapter 5 Daily Operation and Printer Maintenance Press this grey hook to remove the ink cartridge. Protective Ink Cartridge BCI11.

Do not touch or insert anything into this filter. Insert the ink cartridge to align the marks Chapter 5 Daily Operation and Printer Maintenance. Press the CARTRIDGE button. The cartridge holder moves to the home position and the printer starts cleaning the print head. Replacing BJ Cartridges Follow this procedure to replace or exchange a BJ Cartridge. Before you replace a worn BJ Cartridge. If the printer is off, press the POWER button to switch it on. Press the CARTRIDGE button. The cartridge holder moves to the centre and the POWER lamp flashes. This section describes how to install the

scanner software and, install and remove the Scanner Cartridge. Click the Install Software button. Click the IS Scan Software button. The button colour changes to red. Click the Start button. Chapter 5 Daily Operation and Printer Maintenance. Confirm Destination Location and click the Next button. The installation of the scanner software begins. Follow the instructions displayed to complete the installation. Chapter 5 Daily Operation and Printer Maintenance. Confirm the Destination and click the Install button. The installation for the scanner software begins. Follow the instructions displayed to complete the installation. Chapter 5 Daily Operation and Printer Maintenance. Check the printer POWER lamp and make sure that it is on. If the lamp is off, press the POWER button to switch the printer on. Press the CARTRIDGE button. The cartridge holder moves to the centre. Hold the green tab to remove the BJ Cartridge. Make sure that you remove the whole BJ Cartridge, not just the ink cartridges. Chapter 5 Daily Operation and Printer Maintenance Film cable. Insert the Scanner Cartridge so the marks are aligned. When the top cover is open, never touch the orange film cable inside the printer. Chapter 5 Daily Operation and Printer Maintenance Film cable. Check the printer POWER lamp and make sure that it is on. If the lamp is off, press the POWER button to switch the printer on.

Store the Scanner Cartridge in its protective case. Remove the BJ Cartridge from the BJ Cartridge Container. Chapter 5 Daily Operation and Printer Maintenance Film cable. You can start cleaning or flushing the print head with the printer driver or the operation panel. For details about starting cleaning or flushing with the Windows printer driver, refer to the Windows Printer Driver Guide or Macintosh Printer Driver Guide. This secures the cartridge holder in the home position. On the right side of the printer, slide the power lock switch to the left position. This locks the printer off so it cannot be switched on accidentally during transportation. Remove the battery pack only if you are going to store the printer for a prolonged period three months or more. An error message is shown on the screen If there is an error message shown on the screen regarding to the printer, refer to "Error messages". 91 Identify the problem Identify the problem by referring to "Quick reference list of possible. For Windows Printer Driver Guide or Macintosh Printer details refer to the Driver Guide. Refer to the appropriate section for a possible solution to the problem. Problem Error writing to USBPRNxx for Printer BJC55 Service error xxx. Call for service! This program has attempted and illegal operation and will shut down. Windows Macintosh Try printing a nozzle check pattern Check the status of the BJ Cartridge by printing the nozzle check pattern. Selecting the BJC55 as the default printer Windows Click Start, point to Settings, and click Printers. Rightclick the Canon BJC55 and then click Set as Default to check this selection on. Macintosh From the Apple menu, select Chooser. In this situation, restart the computer and the printer and start the print job again. If you are using Windows, click the Start button, point to Programs, click BJ Printer, then click BJ Printer Monitor and cancel the print job.

Windows Check to see if Canon BJC55 Series printer has been selected as the default printer Select Canon BJC55 Series as default printer. Windows Check to see if the printer port setting is correct If the printer and the computer are connected to the USB interface, USBPRNxx must be selected as the printer port. Under Device Status, read the information regarding printer port status. If the message tells you that the device is not performing normally, remove the BJC55 device, and then execute the installation again. Chapter 6 Troubleshooting. Also make sure that the correct printer port is selected. Selecting the printer with the Chooser From the Apple menu, select Chooser. Change the location of the printer so the infrared ports are facing on another at the correct distance and angle. Discontinue printer spooling and try printing again by sending the print data directly to the printer. Switching off print spooling Click Start, point to Settings, and click Printers. In this situation, uninstall the printer driver and reinstall from the beginning. Then reinstall the printer driver. Windows Check to see if the following message has been displayed File cannot be found on the specified path or disk. Click the Close button. Click the "x" in the upper right corner to close the System Properties window. Disconnect the USB cable from the computer. High Resolution Paper

HR101, but for professional jobs you may prefer one of the. Use the selected paper size, or change the paper size selection in the software application. Rightclick the Canon BJC55 icon and select Properties. Click the Main tab. Click the Advanced button. Click the Quality tab. For the Paper Feed option, select Manual Feed. Windows Selecting the Orientation Click the Start button, point to Settings, and click Printers. Rightclick the Canon BJC55 icon and select Properties. Click the Page Layout tab. Click Portrait to print lengthwise to the direction of paper feed. Portrait ABC, Inc.

If you select the Orientation with the software application, you must select the identical setting with the printer driver. If the software application does not allow selection of the Orientation, you must use the printer driver Orientation selection. Normal Vertical Lines Windows Macintosh Other Make sure the BJ Cartridge is correctly installed Remove the BJ Cartridge and install it correctly. Make sure the triangular marks on the BJ Cartridge and holder are aligned then press down gently on the raised, left side of the BJ Cartridge until you hear it lock in place. Rightclick the Canon BJC55 icon and select Properties. Click the Main tab. Click the Advanced button. On the Quality sheet, drag the Print Quality slide bar completely to the right to select Fine. Under Print Mode, click the Click the Details button. Click the Quality icon. Drag the Print Quality slide bar completely to the right to select Fine. Manual icon. Chapter 6 Troubleshooting. Windows Confirming the infrared connection Click the Start button, point to Settings, and click Control Panel. Selecting the infrared transceiver port Click the Start button, point to Settings and select Printers. Rightclick the Canon BJC55 icon and select Properties. Click the Details tab. Chapter 6 Troubleshooting. Windows Make sure the BJC55 Series is connected properly with the computer via infrared port Confirming correct infrared connection Click the Start button, point to Settings, and click Control Panel. If you do not see "BJC55" displayed, first check the area between the computer and the printer and make sure that nothing is blocking infrared communication between computer and printer. If nothing is. You can pull the paper out from the front or the rear of the printer. If the paper tears off inside the printer, switch off the printer and open the top cover. When printing with these special media, a spread sheet of plain paper in front of the printer where the sheets are ejected before starting the print job.

Rightclick the Canon BJC55 icon and select Properties. Click the Main tab. Click the Advanced button. Click the Colour tab. Click the Colour Adjustment box on. Windows Switching Greyscale Print off Click the Start button, point to Settings, and click Printers. Rightclick the Canon BJC55 icon and select Properties. Click the Main tab. Click the Greyscale Print box off. Chapter 6 Troubleshooting. If another black and white printer is selected as default printer, then the BJC55 Series could print black and white only. Rightclick the Canon BJC55 icon and select Properties. Click Main tab. Select the BJ Cartridge and Media Type for the print job. Use only Canon ink cartridges for best quality. Chapter 6 Troubleshooting. If the print start position is incorrect, this can cause the print area to shift and appear out of position at the top, bottom, left, or right on the printed sheet. When you are using the printer on battery power only, you cannot switch the printer on if the battery is low. With the battery installed in the printer, connect and use the AC adapter. Chapter 6 Troubleshooting. If the power lock switch is set forward in the lock position, the printer will not switch on even after you press the POWER button. Slide the power lock switch away from you to the unlock position. Windows Macintosh Remove the BJ Cartridge and make sure that the orange protective tape was removed from the print head The ink will not flow with the orange protective tape attached. A sheet of paper is jammed in the printer. Remove it to resume printing. 118 Windows Macintosh Other Determine how long the printer has been in constant operation Continuous printing for an extended length of time could cause the print head to overheat and cause it to stop. Remove any obstacles. Reduce the print quality to avoid blurring or smudging. For details, refer to the Windows Printer Driver Guide or Macintosh Printer Driver Guide. Windows. Rightclick the Canon BJC55 icon and select Properties.

On the Main tab, click the Advanced button then click the Colour tab. Slide the button on the

Intensity slide bar to the left to reduce the amount of ink used in the print job. After switching the printer off and on, if the problem persists, remove the battery and replace it with a new one. A serious error. Switch the printer off. If there is no paper on the Feed Slot then load some paper. If the paper is not straight on the Feed Slot, then set it straighten and try again. Switch the printer off. Connect the AC adapter to the printer then plug it into a power outlet, or remove the battery and install a charged battery. When the printer power light is flashing green, the printer is warming up. Wait few moments for the POWER lamp to stop flashing. The printer is ready when the green flashing lamps lights green and remains on. Uninstall it and install the printer driver again. The problem may exist within the printer driver. Uninstall the printer driver and reinstall it. For details about uninstalling the printer driver, refer to the Macintosh Printer Driver Guide. Uninstall it and install the printer driver again. The problem may exist within the printer driver. Uninstall the printer driver and reinstall it. Rightclick the Canon BJC55 icon and select Properties. Click the Page Layout tab. Click the Background Printing check box on. Macintosh Switching on background printing From the Apple menu, select the Chooser. If the green light is flashing, then printer is warming up. Wait few moments for the printer to finish warming up. If the printer does not switch on then see page 128. The Contact List, a list of Canon Help Desks with telephone numbers and addresses worldwide, is provided with the printer. Before you call for service, however, we recommend that you gather some information that will help Help Desk advisors find a solution for your problem. Check the connection of the interface cable at the printer and at the computer.

A loose interface cable can generate random errors and error messages which could make identifying the cause of the problem very difficult. Make sure that both connections are secure. Before you call for service to obtain information about acquiring the latest version of the printer driver, make sure that you know the number of your current printer driver. Obtaining the OS version number and amount of memory If you are using Windows Rightclick the My Computer icon. Rightclick the hard disk icon. Select Properties. Read and jot down the number for the amount of Free Space on the disk. If you are using Macintosh On the desktop, click the Macintosh HD icon. Rightclick the Canon BJC55 icon and select Properties. Click the Main tab. Click the About button. Read and jot down the version number. However, we recommend setting the margins greater than 22 mm because the print quality degrades below this. The printers maximum mechanical printing area is inside the top and bottom margins. Consumables Black BJ Cartridge BC10 Contains both a print head unit and replaceable black ink cartridge. Ink Cartridge BCI10 Black Used in the Black BJ Cartridge BC10. Color Image Scanner Cartridge IS12 This Scanner Cartridge turns your printer into a colour scanner. The power supply cord provided with purchase is for use in the country where you purchased the printer. Appendix D Printer Specifications. Bubble Jet printer An ink jet type printer that heats the ink to a boiling point in a nozzle to form a bubble. When the bubble expands, there is no room left in the nozzle for the ink which is ejected onto the paper. The cartridge holder moves backwards and forwards when the printer is operating and remains at rest in the home position on the left side of the printer when the printer is not in use. The standard resolution for your printer is 360 dpi in the HQ mode. In the smoothing mode, resolution up to 720 x 360 dpi can be achieved.Lines per inch.

The measurement used in describing the number of lines that will print within one vertical inch. The printing area is smaller than the paper.Resident fonts are stored in ROM.Expressed in terms of dots per inch dpi. This provides compatibility with software that assumes 66 lines will fit on each page. We have 7 Canon BJC55 Series manuals available for free PDF download User Manual, Service Bulletin, Service Manual, Specification, Start Here. This page requires Javascript. Modify your browsers settings to allow Javascript to execute. See your browsers documentation for specific instructions. To install your download click on the name of the downloaded file.Scroll down to see your support options. You can also click one of these links to search our extensive Knowledge Base or visit the Canon Community Forum. Actual prices are determined by individual dealers and may

vary. The driver may be included in your OS or you may not need a driver. Recommended Drivers

File Name	Date	File Size	Optional Drivers	File Name	Date	File Size	Recommended Software	File Name	Date	File Size	Optional Software	File Name	Date	File Size	Recommended Manuals	File Name	Date	File Size	Optional Manuals	File Name	Date	File Size
Warranty repair or replacement shall not extend the original warranty period of the Product. A dated proof of purchase is required at the time of warranty service. A copy of your dated bill of sale will satisfy this requirement. This warranty does not cover any accessories, or any consumables, such as paper or ink cartridges, as to which there shall be no warranty or replacement. Repairs of such Canon brand peripheral equipment shall be governed by the terms of the Separate Warranty. The sole warranty, if any, with respect to such nonCanon brand items is given by the manufacturer or producer thereof.																						

Without limiting the foregoing, dropping the Product, scratches, and abrasions will be presumed to have resulted from misuse, abuse or failure to operate the Product as set forth in the users manual or other documentation for the Product. If the problem cannot be corrected over the telephone, and you elect the InstantExchange option, a reference number will be issued to you. You will be asked for the Product serial number and other information pertaining to your Product and for a ship to location for the replacement Product must include street address. After receipt of the replacement Product with instructions and a prepaid waybill, follow the enclosed instructions on how to ship your product to the Canon USA repair facility. Your Product must be returned in the shipping carton in which the replacement Product was packed and include the reference number, A COPY OF YOUR DATED PROOF OF PURCHASE BILL OF SALE, and a complete explanation of the problem. Canon USA does not guarantee same day shipment in the event of the occurrence of factors beyond its reasonable control. The replacement Product you receive may be a refurbished or reconditioned unit and will be covered for the balance of the period remaining on your original limited warranty. Scroll down to easily select items to add to your shopping cart for a faster, easier checkout. Visit the Canon Online Store Tired of trying to make your handwriting legible in order to illustrate a point. For your next important meeting, you can make impressive charts and graphs with these clear, overhead transparencies, printed right from your Canon Color Bubble Jet printer. Package includes 50 sheets. Optimize output resolution to create nearphotographic images. This paper is great when you want highquality color output to produce winning reports and eye-catching graphics. Use with genuine Canon Photo Inks for true photoquality output. Package includes 100 sheets. Chapter 1 Introduction. 6 Index.

174 Also describes installation of the optional. To view the Reference Guide, Adobe Acrobat Reader 3.0 or later must. Whenever you need Page 22 Power supply Black BJ Cartridge BC10 To extend the capabilities of your printer, Canon offers several types of Bubble Jet. Page 24 Front view Glossy Photo Cards FM101 Page 25 Available options. The following options are available for use with this printer. For details, Page 26 Operation panel Chapter 2 Allows you to operate some functions. 26. Auto Sheet Feeder ASF50 connector. Connects the optional Auto Sheet Feeder. Page 28 Installing the battery pack Rear view Page 29 POWER button. Press to switch the printer on and off. 32. POWER lamp. Flashes for a few moments after power. Press and hold down the RESUME button for Page 31 Connecting the printer and installing the printer drivers 3. Align the mark on the printer with the mark on the battery pack Page 37 Choosing which BJ Cartridge to use 3. From the Start menu, choose Find, then click on Files or Folders. When you switch the printer on, the printer beeps three times and. Page 42 3. Remove the BJ Cartridge from its protective packaging. Page 44 Paper and other print media 6. Press down gently on the high side of the BJ Cartridge until it snaps Chapter 2 Setting Up the Printer 43 Page 49 The following envelopes cannot be used Page 50 copier transparencies as they cannot absorb the ink. Page 51 Changing the BJ Cartridges 3. Select one sheet of the media you want to load and hold the print For example, Page 59 Samples and descriptions of each test print are provided on the Chapter 4 Performing Test Prints 59 Page 64 How to enable the lowink warning Replacing the battery pack Page 65 Switching off the lowink warning 6.

Remove the new battery pack from its packaging. Page 67 Examining the ink cartridges 4. Reset the operation count for the lowink warning Page 70 Replacing an ink cartridge The frequency of Page 77 For Windows Page 79 For Macintosh.

If you have used Mac OS 9 to set up a Multiple User scheme with. Limited accounts and. When the top cover is open, never touch the orange film cable inside. Page 82 5. Store the BJ Cartridge in a BJ Cartridge Container SB10. Page 83 Before you start cleaning 8. Press down gently on the high side of the Scanner Cartridge until it Page 85 Cleaning the print head 7. Insert the BJ Cartridge into the cartridge holder diagonally so the Page 86 Preparing the printer for travel or storage Cleaning inside and outside the printer Ink residues may collect in this Cleaning the print head Page 90 Quick reference list of possible problems Chapter 6 Page 95 If print quality is not restored after cleaning. Perform print head deep cleaning to flush the nozzles. Print a nozzle. Page 96 Windows Macintosh Other Page 97 Windows Macintosh Other. Check interface cable connections at the printer and Page 99 Selecting USBPRNxx as the printer port Page 100 Macintosh Page 101 Windows Other. Cannot print via the infrared port. If the print job does not start when using the infrared port. Page 102 Windows Page 103 Windows. Make sure the printer port USBPRNxx is operating properly. Check the operation status of the printer port. 96. Windows. Page 104 Windows Macintosh USB driver installed correctly Follow the procedures in Getting Started to install the printer driver Add more memory RAM if required. Shut down all other software applications before you open. Page 108 Windows Macintosh Other Cannot feed manually. If you cannot feed paper or other media with manual feed, check the Page 111 Windows Macintosh. Printout rotated 90 degrees. If the printout is rotated 90 degrees the Orientation setting is not correct. Here. Page 112 Some software applications allow you to select the Orientation for the Page 113 Windows Macintosh Other. Vertical lines are broken. Vertical lines in the printed document are broken or jagged. Normal Vertical Lines.