

2. PRODUCT SPECIFICATIONS 2-1. Printer Specifications

Type	Desktop serial color inkjet printer		
Paper feeding method	Auto sheet feed (auto sheet feeder, front feeder)		
Resolution	4,800 dpi x 1,200 dpi (Max.)		
Throughput (target value)	4x6, Borderless printing Printing from a computer: Approx. 47 sec. (PP-101 4x6, borderless printing, standard settings) Camera Direct printing: Approx. 95 sec. (PP-101 4x6, borderless printing)		
For reference:	Max speed/Custom 51 Standard		
	Black (4x6) (FINE_BK)	25 ppm	13.9 ppm
	Color (4x6) (FINE_CL)	17 ppm	10.4 ppm
Note:	Paper feed from the ASF		
*1:	Based on Canon standard pattern. Print speed may vary depending on system configuration, interface, software, document complexity, print mode, page coverage, type of paper used and does not take into account data processing time on host computer.		
*2:	When printing a 6 megapixel image taken by certain Canon digital camera from PictBridge on default settings using Photo Paper Plus Glossy without border. Actual print speed may vary depending on image data, print mode, type of paper used and device that the printer is connected to.		
Printing direction	Bidirectional, uni-directional		
Print width	Max. 203.2 mm (7.9 in) (borderless printing)		
Interface	USB 2.0 Hi-Speed, Bluetooth ver. 1.2 (optional)		
Computer	PictBridge with a PictBridge-supported digital camera, digital video camera, or camera-equipped mobile phone		
Paper feed	ASF		
Stacking capacity	Max. 13 mm (Approx. 150 sheets of 64 g/m ² plain paper)		
Paper weight	64 to 105 g/m ² , Canon specialty paper 273 g/m ² at the maximum		
Paper specifications	Type	Size	Stacking capacity (sheets)
	Plain paper	Legal	Approx. 150 (13mm)
		A4, Letter	15
	Super White Paper SW-201	A4, Letter	Approx. 100 (13mm)
	High Resolution Paper HR-101N	A4, Letter	80
	Photo Paper Plus PR-101	A4, Letter, 8x10	15
		4x6, 4x8, 5x7	25
	Photo Paper Plus PP-101	A4, Letter, 8x10	15
		4x6	25
	Glossy	A4, Letter, 8x10	15
	Photo Paper Plus SG-201/101	A4, Letter	25
	Semi-gloss	A4, Letter	25
	Glossy Photo Paper GP-401	A4, Letter	10
		4x6, Credit Card	25
	GP-S01/S02	A4, Letter	10
		4x6	25
	Matte Photo Paper MP-101	A4, Letter	10
		4x6	25
	Photo Paper Plus Double Sided PS-101	A4, Letter, 8x7	1
	Photo Stickers PS-101	4x6	1
	T-shirt Transfer TR-101	A4	1
	Envelope DL-size, COMM10	10	No

3

File Name: canon pixma ip3300 manual pdf.pdf

Size: 1555 KB

Type: PDF, ePub, eBook

Category: Book

Uploaded: 8 May 2019, 13:28 PM

Rating: 4.6/5 from 619 votes.

Status: AVAILABLE

Last checked: 6 Minutes ago!

In order to read or download canon pixma ip3300 manual pdf ebook, you need to create a FREE account.

[Download Now!](#)

eBook includes PDF, ePub and Kindle version

[Register a free 1 month Trial Account.](#)

[Download as many books as you like \(Personal use\)](#)

[Cancel the membership at any time if not satisfied.](#)

[Join Over 80000 Happy Readers](#)

Book Descriptions:

We have made it easy for you to find a PDF Ebooks without any digging. And by having access to our ebooks online or by storing it on your computer, you have convenient answers with canon pixma ip3300 manual pdf . To get started finding canon pixma ip3300 manual pdf , you are right to find our website which has a comprehensive collection of manuals listed.

Our library is the biggest of these that have literally hundreds of thousands of different products represented.



Book Descriptions:

canon pixma ip3300 manual pdf

Copyright This manual is copyrighted by Canon U.S.A., Inc. with all rights reserved. Under the copyright laws, this manual may not be reproduced in any form, in whole or in part, without the prior written consent of Canon U.S.A., Inc. Auto Power Off Automatically turns off the printer when no print data is sent for a certain interval. If the power plug is removed from the wall outlet with the POWER lamp still lit or flashing green, the printer may become unable to print. Using Specialty Media Canon recommends that you use Canon genuine media to ensure optimal print quality. Photo Quality Media Glossy Photo Paper. Note If you select Front for Plain Paper, the printer will automatically switch to the Front Feeder when Plain Paper is specified for Media Type. A Switch paper source here. For example, if you intend to install the printer in a small place, such as on a shelf with minimal space, you can use just the Front Feeder for printing. For detailed instructions on how to load specialty media into the printer, refer to "Printing Media". Note Align the edges of paper neatly before loading. Loading paper without aligning the edges may cause paper jams. If paper is curled, hold the opposing curled corners and gently bend them in the opposite direction until the paper becomes completely flat. You cannot load any other paper in the Front Feeder. Flatten the four corners of the paper before loading it. In the printer driver, select Front Feeder for Paper Source. See "Printing with Windows" on page 15 or "Printing with Macintosh" on page 16. For details on printer driver settings, see "Printing with Windows" on page 15 or "Printing with Macintosh" on page 16. See "Turning the Printer On and Off" on page 2 and "Loading Printing Paper" on page 4. Create a document or open a file to print using an appropriate application software. See "Turning the Printer On and Off" on page 2 and "Loading Printing Paper" on page 4. <http://dejede.com/userfiles/file/john-deere-513-mower-manual.xml>

- **canon pixma ip3300 service manual pdf, canon pixma ip3300 manual pdf, canon pixma ip3300 manual pdf download, canon pixma ip3300 manual pdf free, canon pixma ip3300 manual pdf online, canon pixma ip3300 manual pdf software.**

Create a document or open a file to print using an appropriate application software. The device turns on automatically. If your device does not turn on automatically, turn it on manually. Setting item names may be different depending on the brand or model of your device. To change the settings, you need to install the Canon Setup Utility from the Setup CDROM and connect the printer to your computer. For details, refer to the User's Guide onscreen manual. The printer will not print if the wrong type of ink tank is used, or if it is installed in the incorrect position. The printer uses the following ink tanks. Note When ink is low, the "!" symbol appears above an ink tank with low ink in the Canon IJ Status Monitor. Obtain a replacement tank as soon as possible. Please be advised that Canon shall not be liable for any malfunction or trouble which may be caused by continuation of printing under the ink out condition. Please be advised that Canon shall not be liable for any malfunction or trouble which may be caused by continuation of printing under the ink out condition. Refilling ink is not recommended. Once you remove an ink tank, replace it immediately. Do not leave the printer with ink tanks removed. Important The printer cannot be used unless all the ink tanks are installed. Close the Top Cover. Note If the ALARM lamp still flashes orange after the Top Cover is closed, see "ALARM Lamp. See "Prepare the replacement tank." on page 28. Increase the Print Quality setting in the printer driver settings. See "Print Results Not Satisfactory" on page 56. Set the Paper Thickness Lever to the left. Open the Front Feeder and extend the Output Paper Support. Open the Canon IJ Printer Utility dialog box. Note The nozzle check pattern will not be printed correctly if there is not enough ink. Replace the ink tank if the remaining amount of ink is

insufficient. Open the Front Feeder and extend the Output Paper Support. Open the Canon IJ Printer Utility dialog box. <http://f1cc.com/userfiles/john-deere-5200-service-manual.xml>

Start Print Head Cleaning. 1 Make sure that Cleaning is selected in the popup menu. See "Examining the Nozzle Check Pattern" on page 34. Note If the problem is not resolved after performing steps 4 and 5 twice, try Print Head Deep Cleaning. See "Print Head Deep Cleaning". Contact your Canon service representative. Contact your Canon service representative. Always load paper in the Auto Sheet Feeder. Make sure that the printer is on and load two sheets of A4 or Lettersized plain paper in the Auto Sheet Feeder. From the patterns, select the most even, least irregular patterns for each column and enter their numbers. Click Note If it is difficult to pick the best pattern, pick the setting that produces the least noticeable vertical white streaks. Note When you turn off the printer, be sure to press the POWER button on the printer. Otherwise, the settings made here will not be saved. Make sure that the printer is on and load two sheets of A4 or Lettersized plain paper in the Auto Sheet Feeder. Click Print Head Alignment. When the confirmation message is displayed, click Print Head Alignment. Important Do not open the Top Cover while printing. Note Clicking Check Setting prints the current settings and finishes Print Head Alignment. Look at the printout. Note When you turn off the printer, be sure to press the POWER button on the printer. Otherwise, the settings made here will not be saved. Routine Maintenance. Make sure that the printer is turned on, and then remove any paper from the printer. Open the Front Feeder and extend the Output Paper Support. Load five or more sheets of A4 or Lettersized plain paper in the Front Feeder. Note Paper is loaded to aid the cleaning process and will not be printed on. If the Rear Cover is not reattached properly, paper may not be fed properly and cause paper jams. Routine Maintenance. Open the Front Feeder and extend the Output Paper Support.

Fold a single sheet of A4 or Lettersized plain paper in half widthwise, and then unfold the paper. Open the Front Feeder and extend the Output Paper Support. Fold a single sheet of A4 or Lettersized plain paper in half widthwise, and then unfold the paper. Important Before cleaning the inner parts, be sure to turn the printer off. Take the appropriate action described in the message. Action If you were unable to proceed beyond the Printer Connection screen, follow the procedure below to reinstall the printer driver. 1Click Cancel on the Printer Connection screen. 2Click Start Over on the Installation Failure screen. If the icon is still not displayed, try different disks and see if they are displayed. If other disks are displayed, there is a problem with the Setup CDROM. Contact a Canon service representative. Check the page size setting in your application. Then, check Page Size on the. Plug the power cord all the way in, since it may be difficult to plug. Open the Top Cover and check the ink lamps. If the Rear Cover is not reattached properly after it has been removed, it can cause paper jams. Press firmly on the Rear Cover until it is fit squarely in the rear of the printer. Troubleshooting. If you cannot pull the paper out, turn the printer off and turn it back on. If the Rear Cover is not reattached properly, paper may not be fed properly and cause paper jams. Troubleshooting Action When printing on Legalsized paper, do not set the last extension segment of the Output Paper Support upright. Once the ink absorber becomes completely full, printing cannot be performed until the ink absorber is replaced. Plug the printer back in and turn the printer back on after leaving it for a while. Make sure that a port named USBnnn Canon iP3300 where n is a number is selected for Print to the following ports. In Windows Me or Windows 98, click the Details tab and make sure that MPUSBPRNnn Canon iP3300 is selected for Print to the following port.

Once the ink absorber becomes completely full, printing cannot be performed until the ink absorber is replaced. You may also have to turn on the camera or select Play mode manually after connecting the device to the printer. For details on dismissing an error message from the printer, see "ALARM Lamp Flashes Orange". Please be advised that Canon shall not be liable for any malfunction or trouble which may be caused by continuation of printing under the ink out condition. The ink absorber absorbs ink used during cleaning, for example. If this message appears, you will need to

call for servicing to replace the absorber and to check the printer for proper operation.

Troubleshooting Action An error requiring servicing may have occurred. Printing on this paper is available only when the Layout function on your camera has a 16up option. See "Recommended Paper and Requirements". The onscreen manual may not be displayed properly depending on your operating system or Internet Explorer version. We recommend that you keep your system up to date with Windows Update.

Warning You may cause an electric shock, fire, or damage the printer if you ignore any of these safety precautions.

Choosing a location Do not place the printer close to flammable solvents such as alcohol or thinners. Never use a power supply source other than the one rated for the printer in the country of where you purchased the printer. Do not shake Print Heads or ink tanks. Ink may leak out and stain clothing or the surrounding area. Never touch the electrical contacts on a Print Head after printing.

Safety Precautions. All other product and brand names are trademarks of their respective owners. As an ENERGY STAR Canon U.S.A., Inc. This page requires Javascript. Modify your browsers settings to allow Javascript to execute. See your browsers documentation for specific instructions. To install your download click on the name of the downloaded file. Scroll down to see your support options.

You can also click one of these links to search our extensive Knowledge Base or visit the Canon Community Forum. The driver may be included in your OS or you may not need a driver.

Recommended Drivers	File Name	Date	File Size	Optional Drivers	File Name	Date	File Size
Recommended Software	File Name	Date	File Size	Optional Software	File Name	Date	File Size
Recommended Manuals	File Name	Date	File Size	Optional Manuals	File Name	Date	File Size

Warranty repair or replacement shall not extend the original warranty period of the Product. A dated proof of purchase is required at the time of warranty service. A copy of your dated bill of sale will satisfy this requirement. This warranty does not cover any accessories, or any consumables, such as paper or ink cartridges, as to which there shall be no warranty or replacement. Repairs of such Canon brand peripheral equipment shall be governed by the terms of the Separate Warranty. The sole warranty, if any, with respect to such nonCanon brand items is given by the manufacturer or producer thereof. If the problem cannot be corrected over the telephone, and you elect the InstantExchange option, a reference number will be issued to you. You will be asked for the Product serial number and other information pertaining to your Product and for a ship — to location for the replacement Product must include street address. The Canon USA repair facility will ship out the replacement Product prepaid by Canon USA. After receipt of the replacement Product with instructions and a prepaid waybill, follow the enclosed instructions on how to ship your product to the Canon USA repair facility. Your Product must be returned in the shipping carton in which the replacement Product was packed and include the reference number, A COPY OF YOUR DATED PROOF OF PURCHASE BILL OF SALE, and a complete explanation of the problem. Canon USA does not guarantee same day shipment in the event of the occurrence of factors beyond its reasonable control.

The replacement Product you receive may be a refurbished or reconditioned unit and will be covered for the balance of the period remaining on your original limited warranty. InstantExchange warranty service is subject to the availability of refurbished or new replacement units. Canon U.S.A., Inc. One Canon Park Melville, NY 11747 USA Scroll down to easily select items to add to your shopping cart for a faster, easier checkout. Visit the Canon Online Store Perfect for creating any type of Greeting Card with an extensive variety of downloadable templates from the Canon Inc. Glossy finish for impressive photos. Genuine Canon Paper for quality images. An economical choice for great prints. An economical choice for great prints. Optimize output resolution to create nearphotographic images. This paper is great when you want highquality color output to produce winning reports and eye-catching graphics. Use with genuine Canon Photo Inks for true photoquality output. Package includes 100 sheets. Great for portrait and wedding and fine art photography prints. Package includes 50 sheets. Simply print your photos on the included 2 sided paper, slide the pages easily into

the album, and share your memories! Simply print your photos on the included 2 sided paper, slide the pages easily into the album, and share your memories! This paper yields a glossy finish and exceptionally right color, giving your images the look and feel of a traditional photograph. Package includes 120 sheets. This paper yields a glossy finish and exceptionally right color, giving your images the look and feel of a traditional photograph. Package includes 50 sheets. This paper yields a glossy finish and exceptionally right color, giving your images the look and feel of a traditional photograph. Package includes 20 sheets. This paper yields a glossy finish and exceptionally right color, giving your images the look and feel of a traditional photograph. Package includes 20 sheets.

This paper yields a glossy finish and exceptionally right color, giving your images the look and feel of a traditional photograph. Includes 20 sheets per pack. Learn about the technology behind the paper. Learn about the technology behind the paper. Learn about the technology behind the paper. Learn about the technology behind the paper. Package includes 20 sheets. Package includes 15 sheets. High quality photos print right onto a sticker sheet, so just peel and stick. 16 stickers per sheet. Photo Paper Plus SemiGloss produces vibrant images with low glare and a soft glossy finish for photo lab quality prints right at home. Photo Paper Plus SemiGloss produces vibrant images with low glare and a soft glossy finish for photo lab quality prints right at home. Photo Paper Plus SemiGloss produces vibrant images with low glare and a soft glossy finish for photo lab quality prints right at home. Photo Paper Plus SemiGloss produces vibrant images with low glare and a soft glossy finish for photo lab quality prints right at home. No accounts or sign ups necessary! While you are waiting, you will have the opportunity to The time required is typically tied to the size of the manual. Please use the box above to search for any other information. Confirm that the CDROM icon is visible in the Easy Setup Instructions for proper installation. Contact a Canon service representative. Doubleclick the CDROM icon on your disk drive and then the name of the disk drive depends on. CDROM. Note. To use the Run command to the Printer Driver Guide onscreen manual. In nonXP Windows, open the My Computer window and then doubleclick the CDROM icon. Contact a Canon service representative. If the CDROM icon is not displayed, restart your computer before reinstalling. Cause. Paper is misaligned.

If the nozzle check pattern does not print out properly Check if any of the loaded printing paper. Contact your Canon service representative. Print Head is too thin. Action If the POWER and ALARM lamps. The ink tank is not compatible with this operation, releasing the function for a. For the errors indicated on your camera. Select Stop in the Easy Setup Instructions to stop printing. This error message indicates. The printer has a builtin the display on manually or switched to playback mode after connected to dismiss the error. Safety Precautions. Please read the safety warnings and cautions provided in this manual. Do not place heavy objects on the plug and the power outlet. If you could cause a fire or electric shock. If flammable solvents come in this manual to ensure that is placed at the power supply and call for service. Safety Precautions Note Move the cursor over items to Windows XP Service Pack 2 installation. The system is not displayed, click Add to add the device. c. Install. Can I get a free service manual for canon imageclass d1150 please Thanks in advance Posted by repair72035 3 years ago Canon imageCLASS D1150 Answers Canon Imageclass D661 Service Manual I am trying to find a service manual for a Canon Imageclass D661. Can someone help me Posted by thecartridgedoctors 4 years ago Canon imageCLASS D661 Answers I Signed Up To Get The Canon Pixma 5320 Manual. Where Is That Listed Posted by joycemily 7 years ago Canon PIXMA iP3300 Answers Canon Service Manual Pixima Mx850 Is there a service manual for the MX850 available. Thank you, If an update is available, an Update button will a. Please do not offer the downloaded file for sell only use it for personal usage. Looking for other manual For this no need registration. May be help you to repair. You could suffer a fatal electrical shock. Instead, contact your nearest service center. Note! To open downloaded files you need acrobat reader or similar pdf

reader program.

In addition, Also some files are djvu so you need djvu viewer to open them. These free programs can be found on this page needed progs If you use opera you have to disable opera turbo function to download file. If you cannot download this file, try it with CHROME or FIREFOX browser. Translate this page Relevant PRINTER forum topics Canon MG 5650 eddig nyomtatott lapszam megtekintese udv masfel eve kaptam karacsonyra ezt a nyomtatot. Mar egyszer csereltem az osszes patronrt. Tavasz ota megint 4 darabot. A problemam az, hogy alig van hasznalva a gep, hetente 12 oldal, rajz, szamla megis gyanusan eszi a tintat, eddig kb 25e Ftot koltottem. A nyomtatások 90 %a fekete, de a szines tintak is gyorsan fogynak. Hogyan tudom megnezni az eddig nyomtatott osszes lap szamat A kezelesiben nem talalom. A hozzavalo patronok tipusa a mellekletben. Balint CANON PIXMA iP4500 nyomtato kuka Udvozlet a Tanyalakoknak. A cimbeli keszuleket, nyomtataskaptelenseggel hoztak hozzam. Nem szivesen, de mivel jo szomszed a tulaj, megneztem. Szerencsere termeszetesen a Tanya adatbazisaban talaltam is anyagot rola, es eljutottam a kovetkezoigHarom hibalehetoseget emliti az SM, mindharom a nyomtatofejjelle kapcsolatos.A bekapcsolast jelzo zold, es a hibajelzo sarga LED felvaltva nyolcat villog, ami az almoskonyv szerint, a nyomtatofej homersekletenek hibajara utal. Hozzaerto kollegak segitseget keresem, szeretnem rendbe tenni, mertJelenleg az EREDETI patronok vannak benne, amikkel megallt. Megtisztelo valaszaitokat elore is koszonomGyarapodik az eszemetdomb. Canon MP560 B200hiba Udvt. A fenti dog B200 hibakoddal jelentkezik be. Felnytott ajtoval jelzi rendesen nyitva az ajto. Tesztek is lefutnak. A neten tele van a youtube ahogy osszetorik, javithatatlansag miatt. Van egy gombnyomogatasi javitas de nekem nem valt be. Pontosabban belep a szervizmodba ott kiirja idle de onnet nem lehet tovabblepdelni barmit nyomogatok. Az ajanlas szerint ekkor 4szer megnyomni a stop gombot majd kikapcsolni es jo.

Sajnos nalam ez nem valt be. A GeneralTool sem tesz vele semmit mert ezt a verziot ugyan felismeri de nem tudja elerni az epromot. Tudtok valami okossagot. Ja a fej es a patronok biztosan jok mert azt at tudtam tenni egy masikbol. Segitsegeteket elore is koszonom. Laci Canon IP4000 bekapcs gondok Sziasztok! Csapdaba estem, a saját nyomtatom adta meg magat. Egy festekpatron csere utan azt kerte a nyomtato, hogy nyomjam meg az ujrakezd gombot. Ezutan a nyomtato kikapcsolt es keptelen vagyok ujra bekapcsolni. Szetbontas utan a tapon ket feszultseget merek, olyan 7,6V es 8,4V korulit. A tap jonak tunik. Azt irja a szervizkonyv, hogy ilyen esetekben csereljunk tapot, vagy logic boardot, azaz a fopanelt. Akkor persze kukaba megy az egesz, mert azt beszerezni csak szervizen keresztul lehet, tobbe kerul a leves, mint a hus. Kerdesem Tudja-e valaki, hogy hany volttal megy ez a kacat, mert amit mertem az szerintem nudli. Illetve olvastam a forumban egy hasonlo josszagrol, ahol is a tap szekunder oldalan van egy tranzisztor, ami a standby uzemmodot kapcsolja. Similar manuals You can write in English language into the forum not only in Hungarian. Ask your question here. Provide a clear and comprehensive description of the issue and your question. The more detail you provide for your issue and question, the easier it will be for other Canon Pixma iP3300 owners to properly answer your question. Ask a question About the Canon Pixma iP3300 This manual comes under the category Printers and has been rated by 1 people with an average of a 5.4. This manual is available in the following languages English. Do you have a question about the Canon Pixma iP3300 or do you need help. Ask your question here Canon Pixma iP3300 specifications Brand Turn the printer off, and make sure that the printhead is not hanging over the paper and that no paper remains in the printer. In that case you will receive a message that the cartridge is empty.

The manual of the purchased cartridge usually contains the solution, if this does not work, it is advisable to contact the seller. Check if the cartridges or toners are full. If so, inkjet printers often require cleaning the printer, the cartridges have dried out, or the print head is broken. With laser printers, calibrating the laser printer is recommended. ManualSearcher.com ensures that you will find the manual you are looking for in no time. Our database contains more than 1 million PDF manuals from more than 10,000 brands. Every day we add the latest manuals so that you will always

find the product you are looking for. Its very simple just type the brand name and the type of product in the search bar and you can instantly view the manual of your choice online for free. ManualSearcher. com If you continue to use this site we will assume that you are happy with it. Read more Ok. You may find documents other than justWe keep our list of direct Canon PIXMA iP3300 driver and firmware links uptodate so they are easy to find when you need them. If the POWER lamp is off, turn the printer on. While the POWER lamp is flashing green, the printer is initializing. Wait until the POWER lamp stops flashing and remains lit green. If the ALARM lamp is flashing orange, an error may have occurred in the printer. For details on how to resolve the error, see ALARM Lamp Flashes Orange. Paper is not loaded. An out of paper error may have been left unattended for a period of time. If paper is loaded, make sure that the paper source the Auto Sheet Feeder or Front Feeder is selected correctly. If the paper source is not selected correctly, use the printer driver to change the paper source. Printer port setting does not match the computers interface connecting the printer. Make sure that a port named USBnnn Canon iP3300 Series Printer 167 U kunt hieronder aangeven waarom deze vraag ongepast is. Wij controleren de vraag en zonodig wordt deze verwijderd.

Emailadressen en volledige namen worden niet als privegegevens beschouwd. Wij vragen u dus ook te reageren op een antwoord. Laat uw emailadres achter op deze site, zodat u op de hoogte blijft. U krijgt dan ook andere vragen en antwoorden te zien. De handleiding is 3,64 mb groot. Als u geen email heeft ontvangen, dan heeft u waarschijnlijk een verkeerd emailadres ingevuld of is uw mailbox te vol. Daarnaast kan het zijn dat uw internetprovider een maximum heeft aan de grootte per email. Omdat hier een handleiding wordt meegestuurd, kan het voorkomen dat de email groter is dan toegestaan bij uw provider. Controleer uw email Vul dan hier uw emailadres in. EOS M and EOS R Full Frame mirrorless ranges deliver the power of DSLR in the body of a compact camera. You can also view our Frequently Asked Questions FAQs and important announcements regarding your PIXMA product.